



**IMPORTANT:** See the machine parts manual for related parts.

**DEALER REFERENCE LIST**

**Series Abbreviations**

RT - Radial Track  
CTL - Compact Track  
Loader

**RT Series Note:** Ignition Key opens every lock on machine unless noted. Parts listed apply to GEN:1 and GEN:2 units unless noted.

**Keys and Ignition Switch - Track Loader**

**Quick Reference List**



L99157



50280186

Model	Serial	Ignition switch	Key only*	Cab door key	Cab door Kit	Notes		
<b>RT Series</b>				<p><b>*RT175, RT210 Replacement Keys:</b> On the rear tool box door, the battery access door, and the hydraulic tank fill door, early units used a different key set than later units. If 50280186 (late-style lock) will not open these locks, order key L99157 (early-style lock).</p>				
RT175		272578	50280186					
RT210		272578	50280186					
RT250		272578	50280186					
<b>CTL Series</b>				<p>On the CTL 60, 70, &amp; 80, key 180486 is for the ignition, manual storage, and engine cover.</p> <p>On the CTL 55, 65, 75, &amp; 85, key 180486 is for the ignition, fuel cap, manual storage, and engine cover.</p>				
CTL60	21303229 & Up	199958	180486					
CTL60	21303228 & Before	180935	180486					
CTL60	21302274 & Up						L99157	810831 or 810200
CTL60	21301107 - 21302273						182110	810384
CTL60	21301106 & before						L99157	810831 or 810200
CTL70		199958	180486					
CTL70	21400737 & Up						L99157	810831 or 810200
CTL70	21400736 & Before						182110	810384
CTL80	21502133 & Up	199958	180486					
CTL80	21502001 - 21502132	180935	180486					
CTL80	21501714 - 21502000	199958	180486					
CTL80	21501713 & Before	180935	180486					
CTL80	21501330 & Up						L99157	810831 or 810200
CTL80	21500752 - 21501329						182110	810384
CTL80	21500751 & Before						L99157	810831 or 810200
CTL55		199958	180486	L99157				
CTL65		199958	180486	L99157	810831			
CTL75		199958	180486	L99157	810831			
CTL85		199958	180486	L99157	810831			